


Electrical Guide MonoGuard, 1 Pedestal, 110vac

Install a **DEDICATED LINE** with its own ground from the Electrical Panel, running the line above the ceiling to above the front door. Run the dedicated 110vac line down along the side of the doorway and terminate it into an AC outlet box that is to be located 8 inches above the floor. The circuit breaker for this dedicated line must be marked at the electrical panel to identify which breaker controls this dedicated line.

Physically verify that this line is dedicated to the system, and measure the line to ensure it is 110vac. Also, the neutral to ground reading must be less than 0.5volts but more than 0.1volts.

Note: The installation can be altered to accommodate the store's entry style.

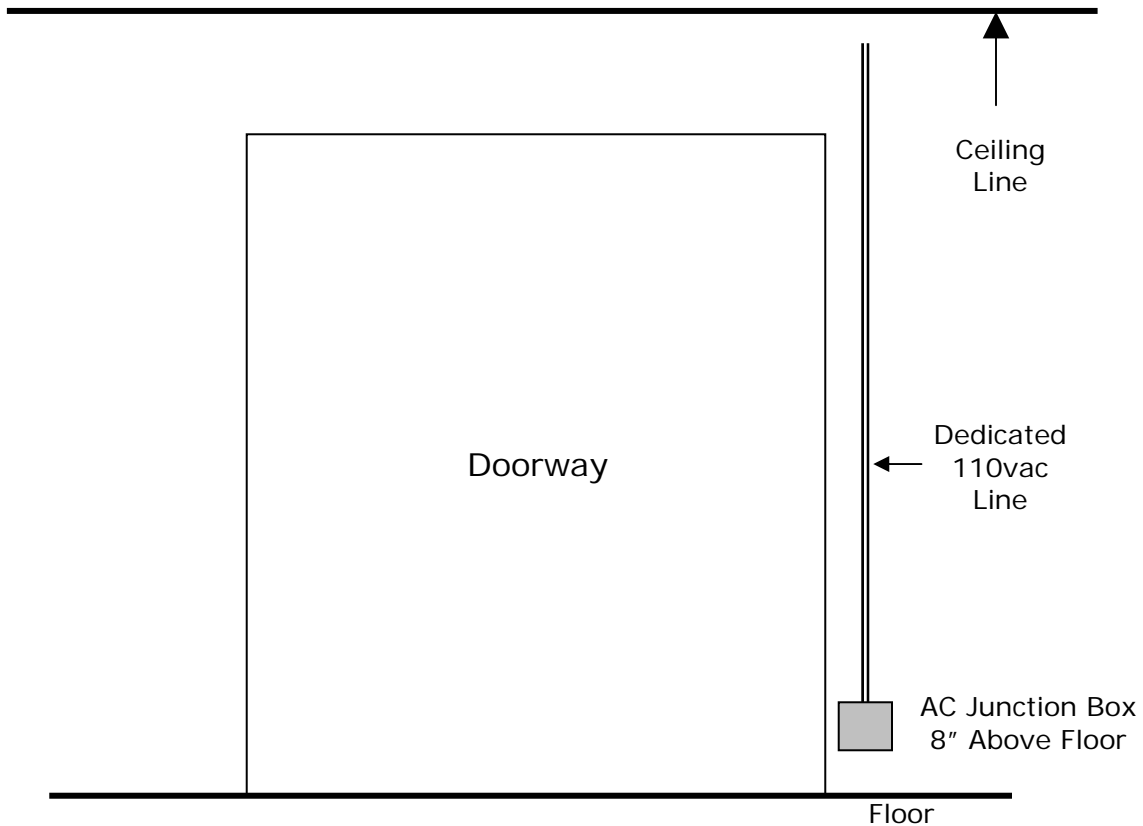

Leave a 12-inch whip in the junction box. Install the cover plate. We will hard wire the EAS system to the junction box; a plug is not needed.

If you have more than one door you can connect that electrical line to the same dedicated line. You can also run the line flush in the wall or in the floor where the pedestal is to be installed.

* * *