


Expanded MultiGuard (3 Pedestals)

Install a **DEDICATED LINE** with its own ground from the Electrical Panel, running the line above the ceiling to above the front door. Run the dedicated 110vac line down along one side of the doorway and terminate it into an AC outlet box that is to be located under each pedestal. The circuit breaker for this dedicated line must be marked at the electrical panel to identify which breaker controls this dedicated line.

Physically verify that this line is dedicated to the system, and measure the line to ensure it is 110vac. Also, the neutral to ground reading must be less than 0.5volts but more than 0.1volts.

Note: The installation can be altered to accommodate the store's entry style.

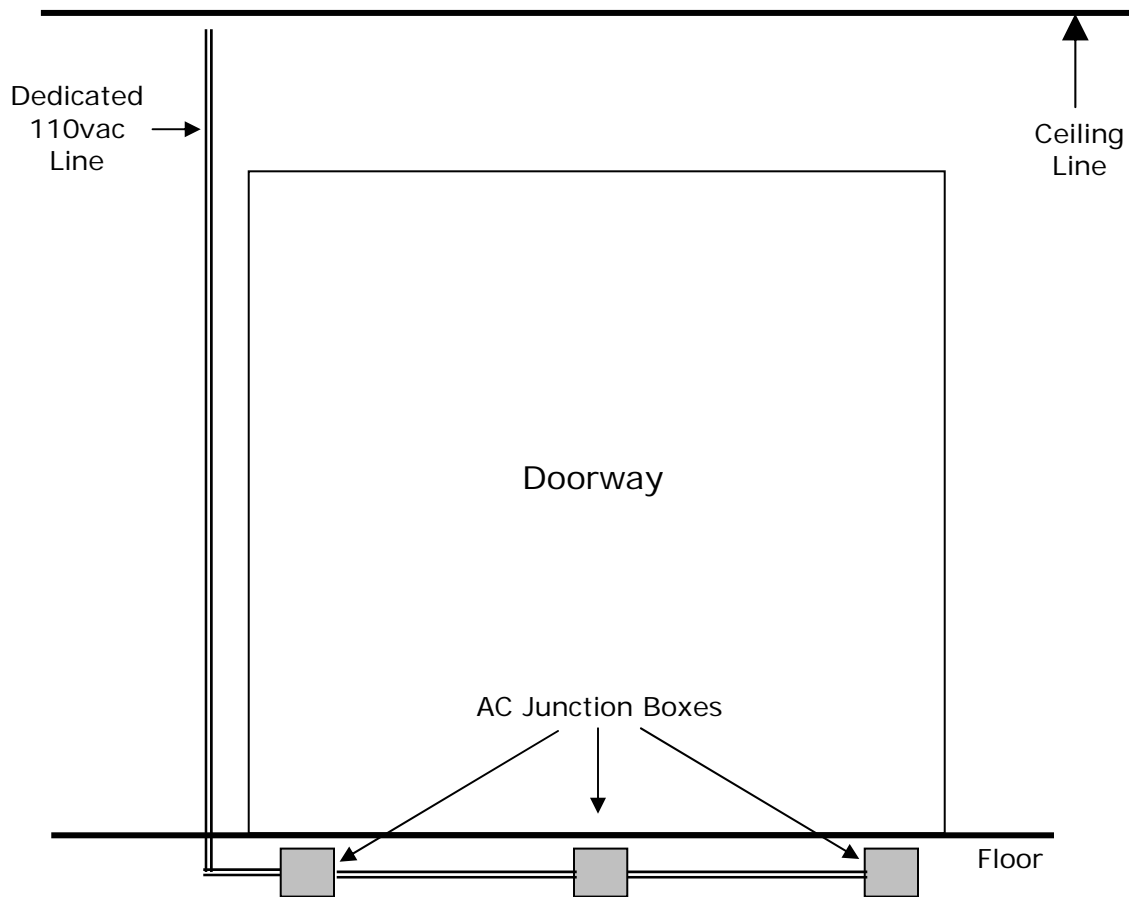

Leave a 12-inch whip in each junction box. Install the cover plates. We will hard wire the pedestals to each junction box; a plug is not needed. Install the interconnecting cables between the middle and each side junction box, leaving a 12" whip in each box.
