


SkyGuard with Conduit Installed in the Floor (Controller below the Ceiling)

Install a **DEDICATED LINE** with its own ground from the Electrical Panel, running the line above the ceiling to above the front door. Terminate the dedicated line into an AC outlet box that is to be located above the front door (above the ceiling). The circuit breaker for this dedicated line must be marked at the electrical panel to identify which breaker controls this dedicated line.

Physically verify that this line is dedicated to the system, and measure the line to ensure it is 110vac. Also, the neutral to ground reading must be less then 0.5volts but more then 0.1volts.

Note: The installation can be altered to accommodate the store's entry style.

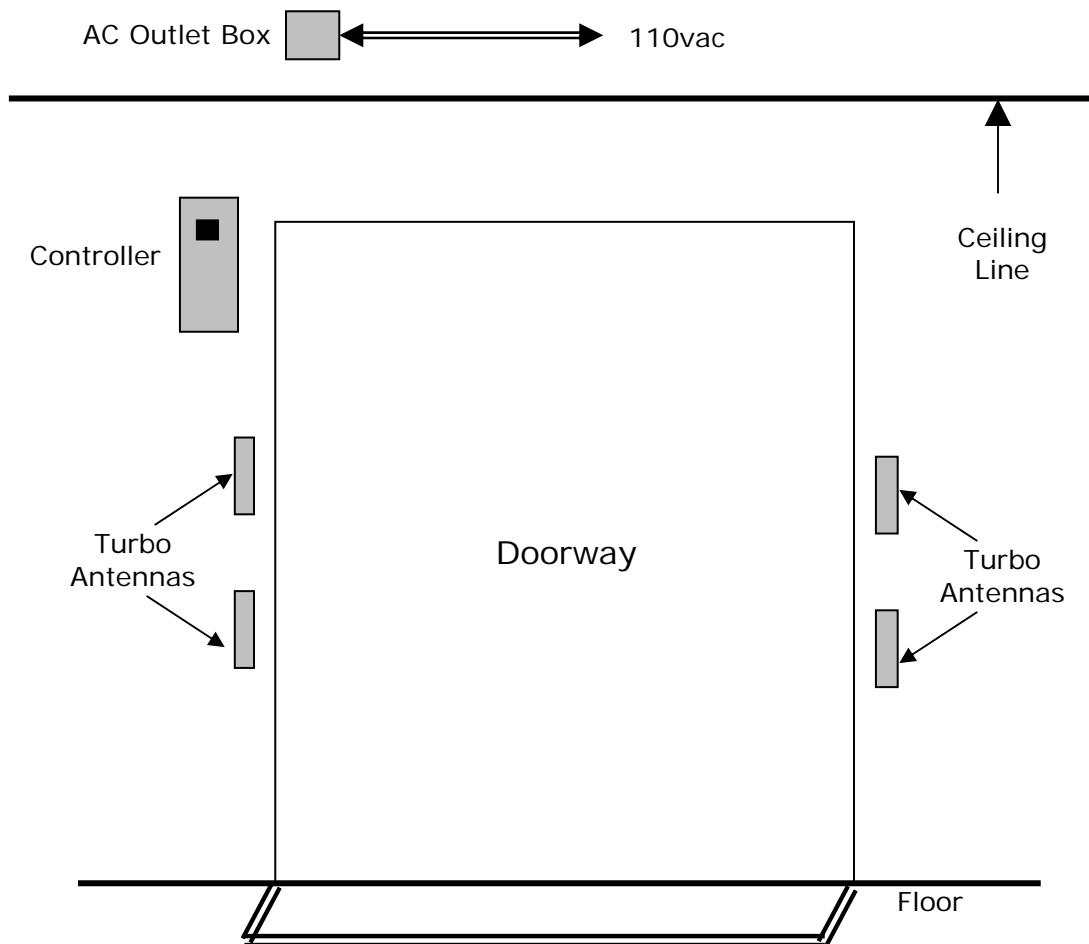

Install 2-inch plastic conduit in the floor. Extend it away from the side of the doorway 1 to 6 inches inside of the store, then across the doorway and back to the wall.
